




ROSELLA

KOMODA 3 DRZ / 3 SZUF

SKROS05











- | | |
|---|-------------------------------------|
| (D) Montageanleitung | (GB) Assembly instructions |
| (FR) Notice de montage | (IT) Istruzioni di montaggio |
| (NL) Handleiding voor de montage | (PL) Instrukcja montażu |
| (CZ) Montážní návod | (SK) Návod na montáž |
| (HU) Szerelési útmutató | (RO) Instrucțiuni de montaj |
| (TR) Montaj talimatı | (RU) ИНСТРУКЦИЯ ПО МОНТАЖУ |

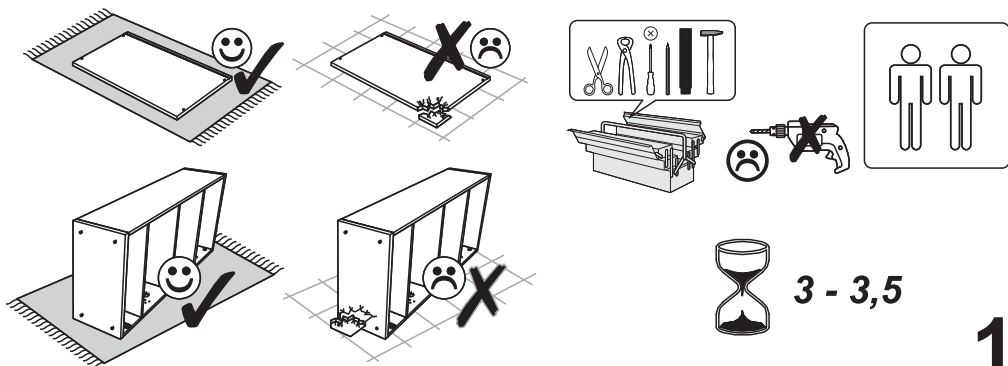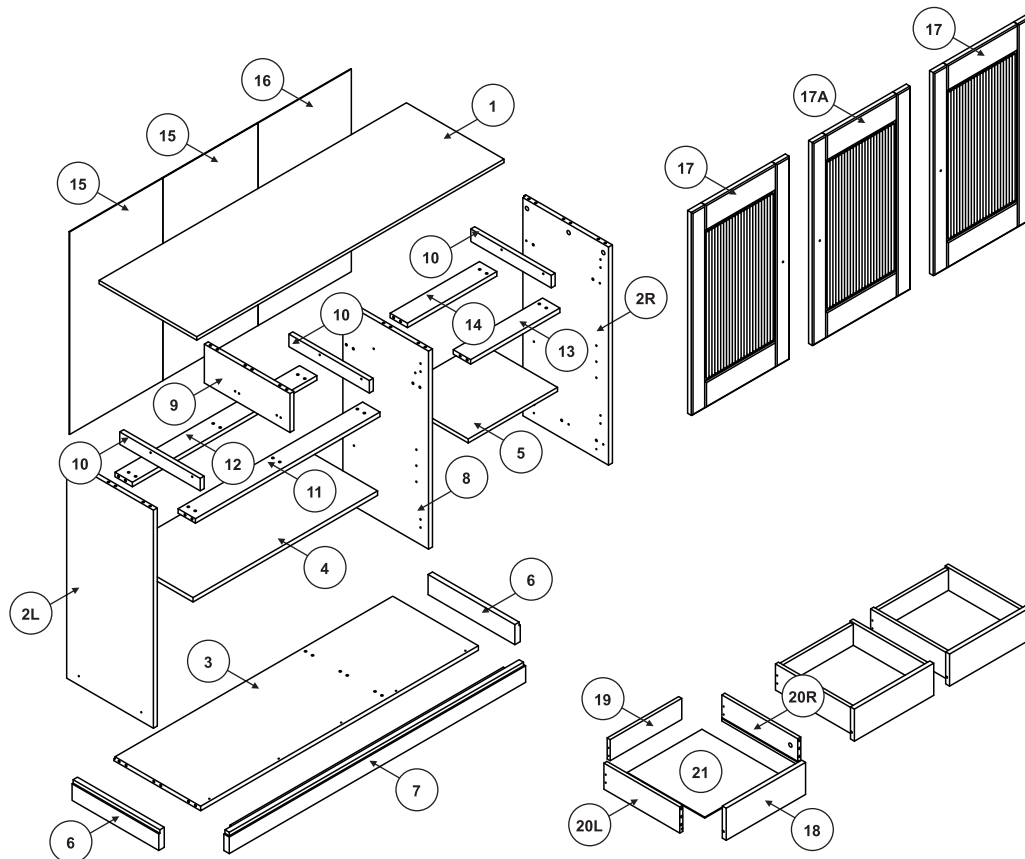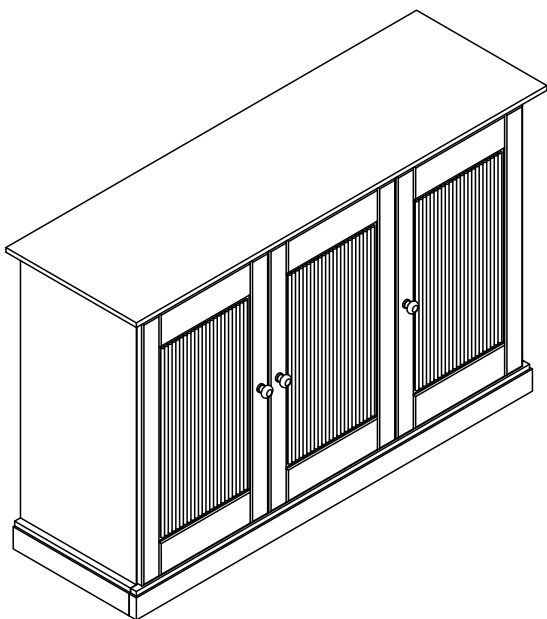


AB 5x32 x12	AD 8x60 x2	BF x2	S x1	PB x2	G L=350 x3	H 6,3x11 x12	N 3x16 x12			
A 8x32 x33	B 34mm x28	C 15x10 x32	Y 5mm x8	PA x4	RA x6	NA 3,5x16 x16	YA 7x50 x11			
NB 3,5x35 x17	NC 3,5x30 x4	KK x2	YB 1x20 x60	MF x2	YC M4x25 x3	O x3	W 4mm x1			

cm 0 1 2 3 4 5 6 7 8 9 10 2

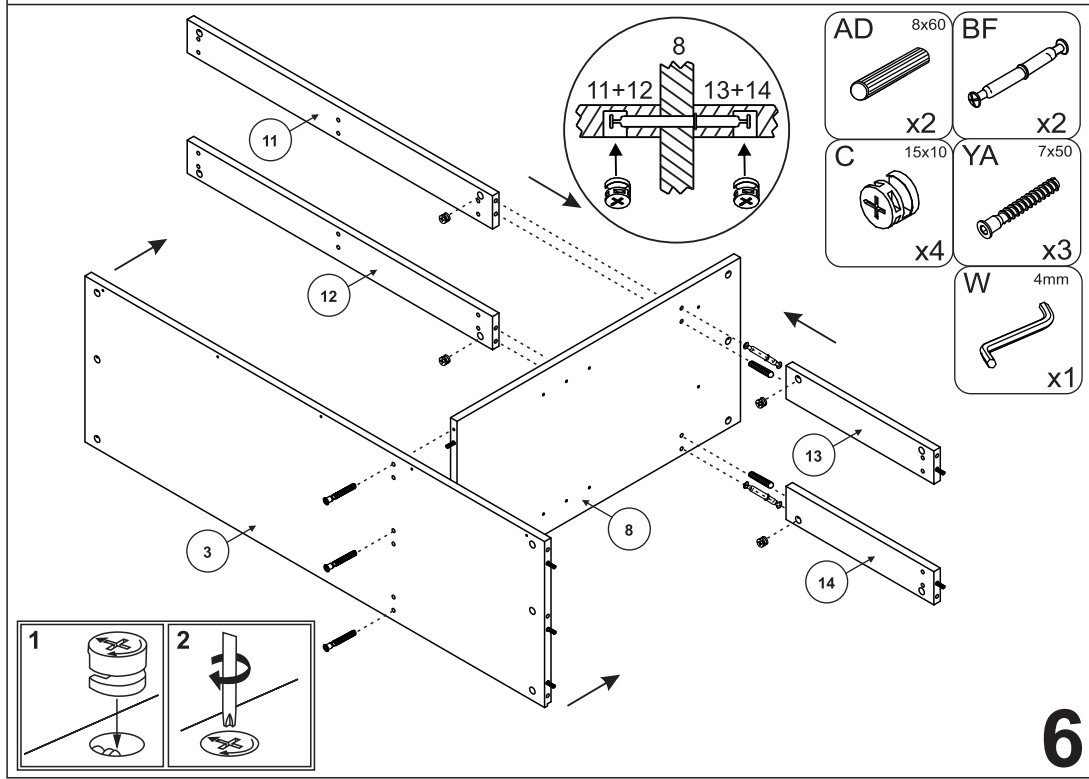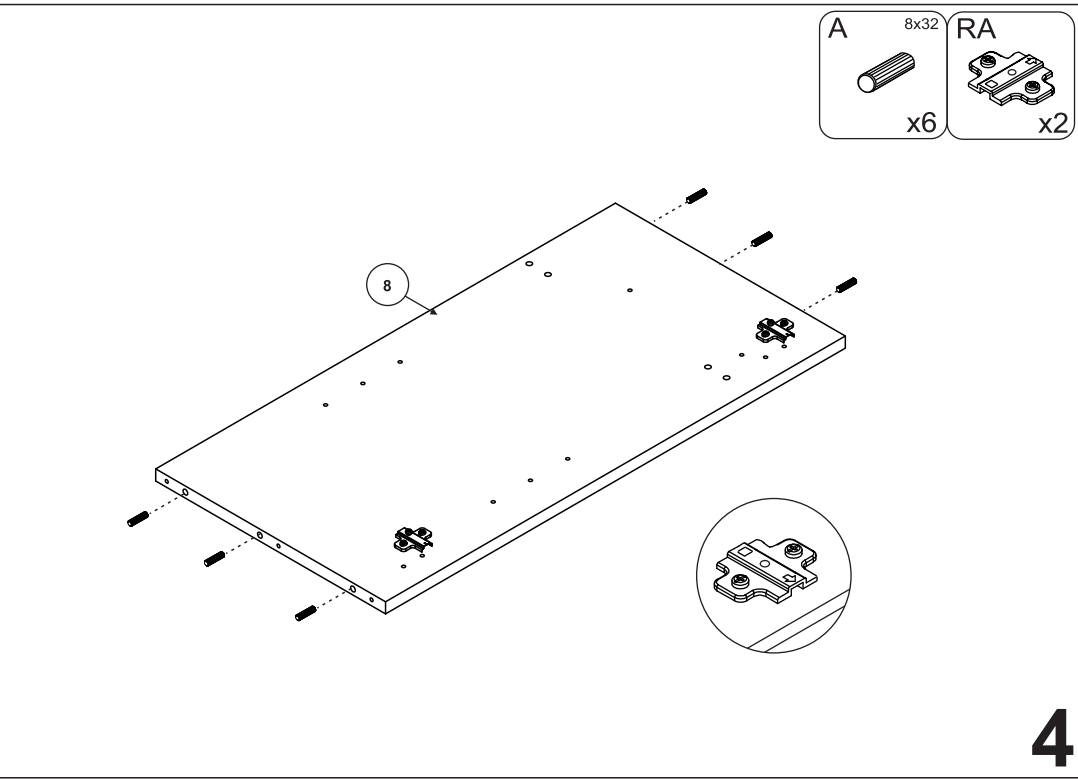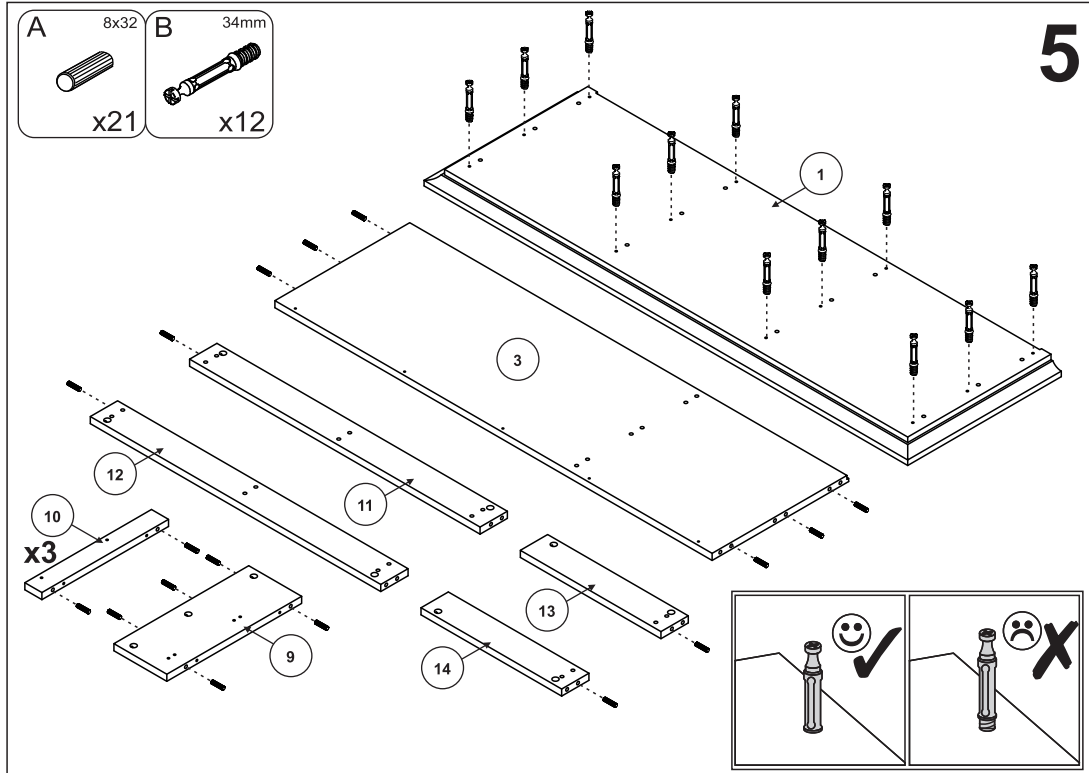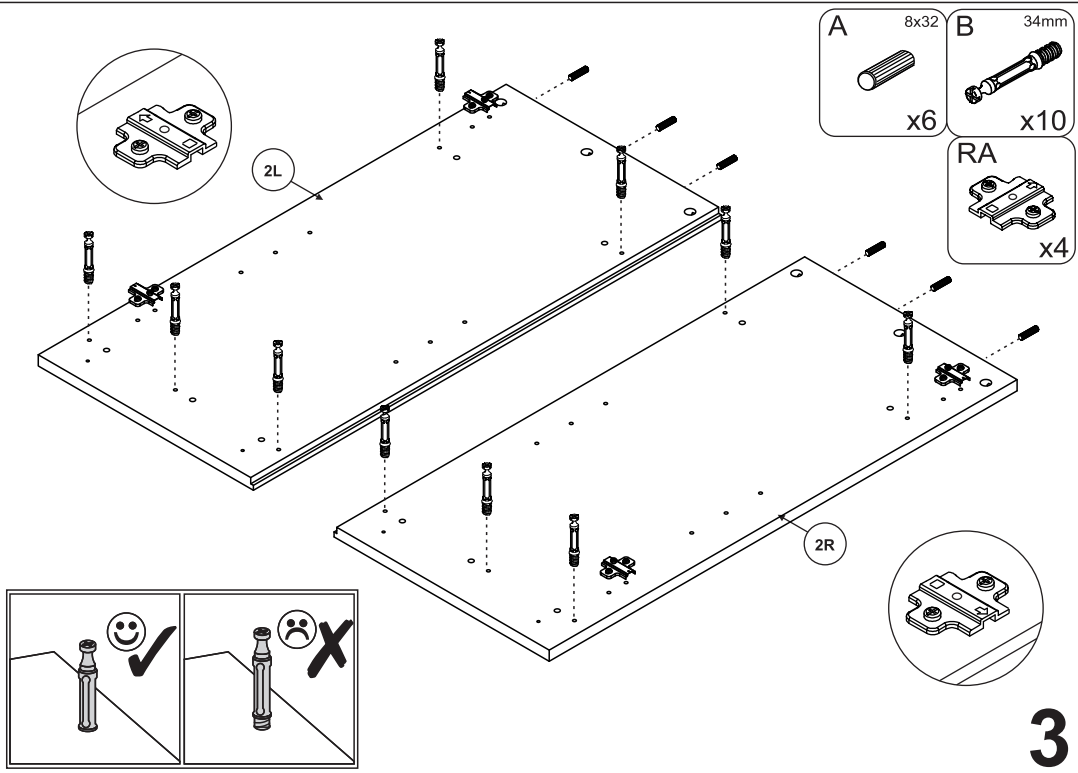

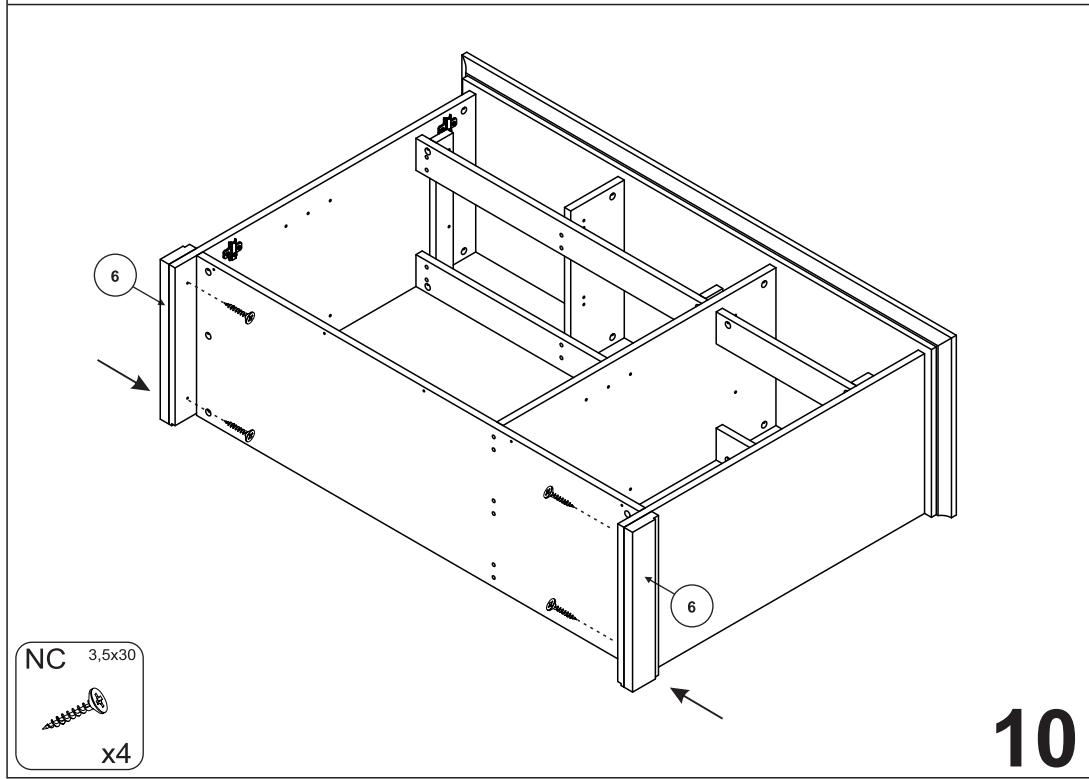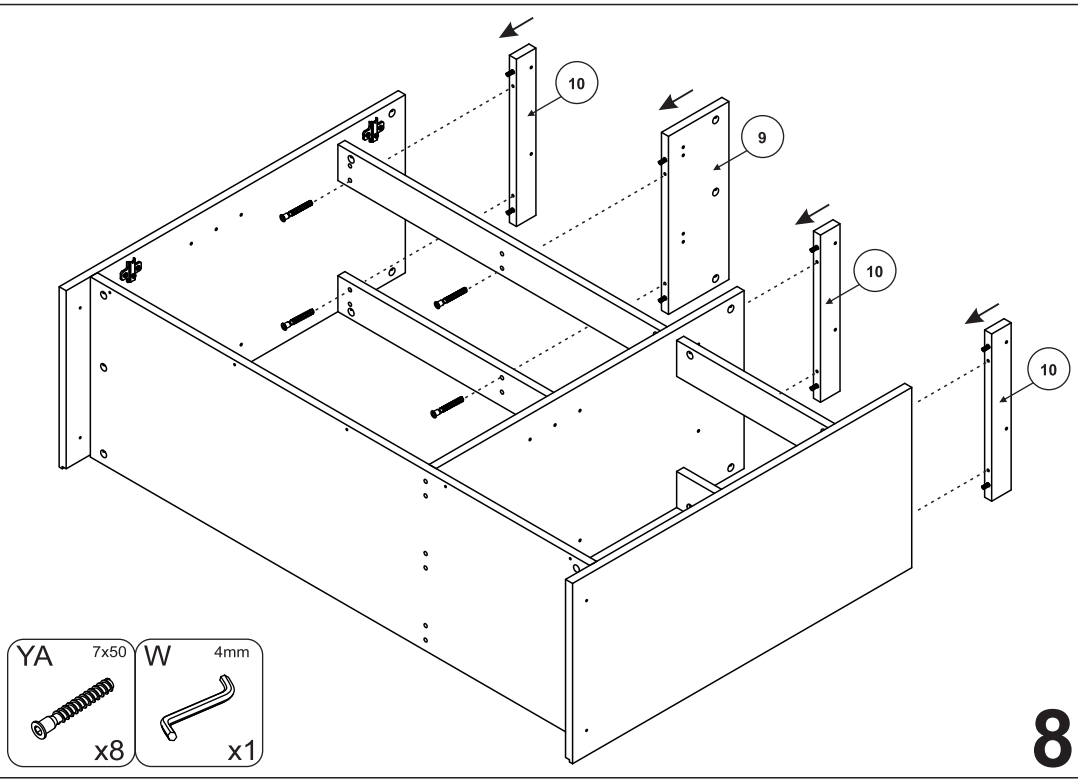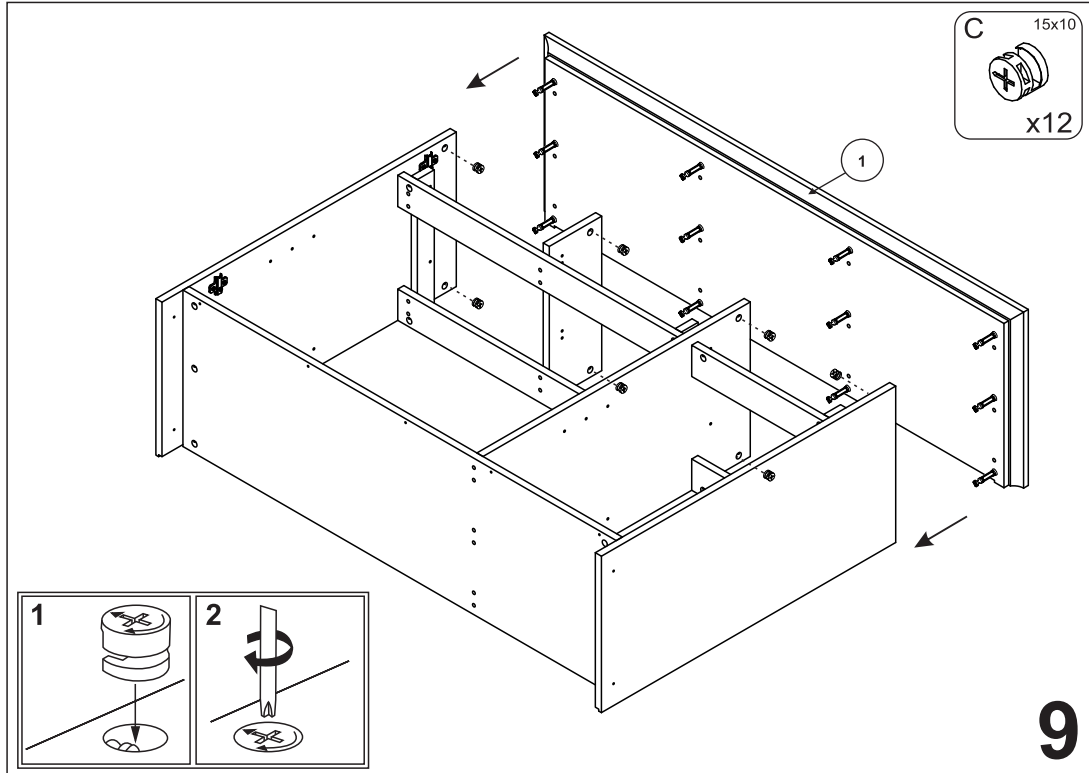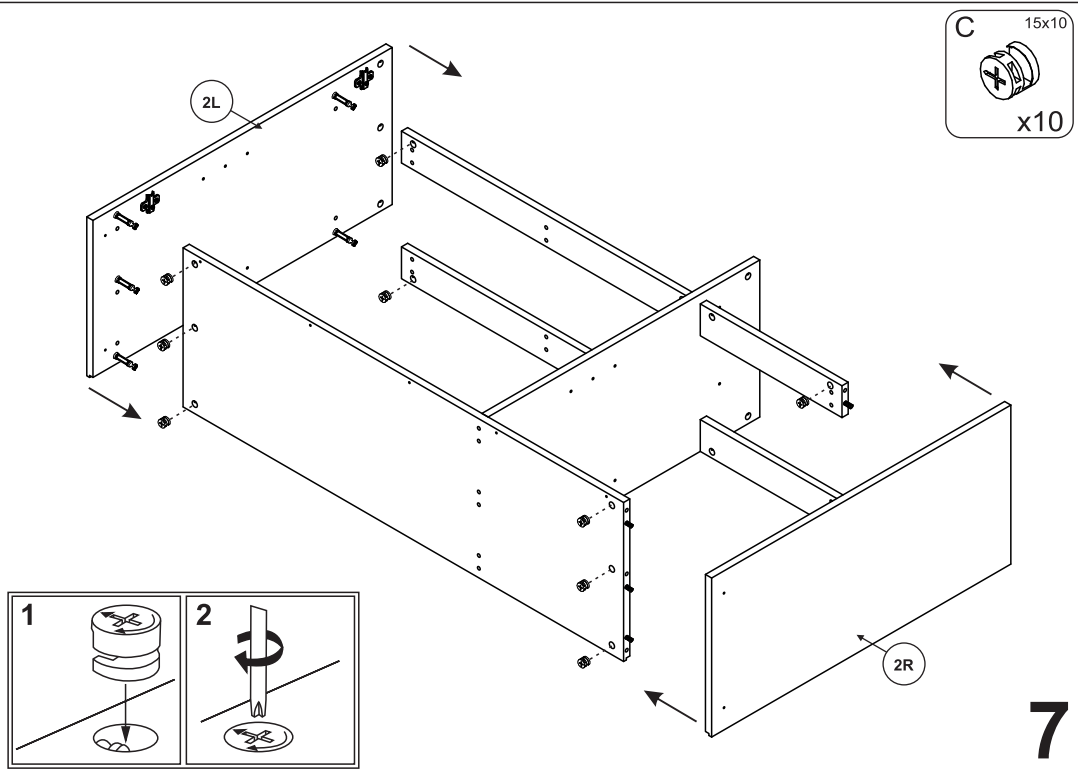


11

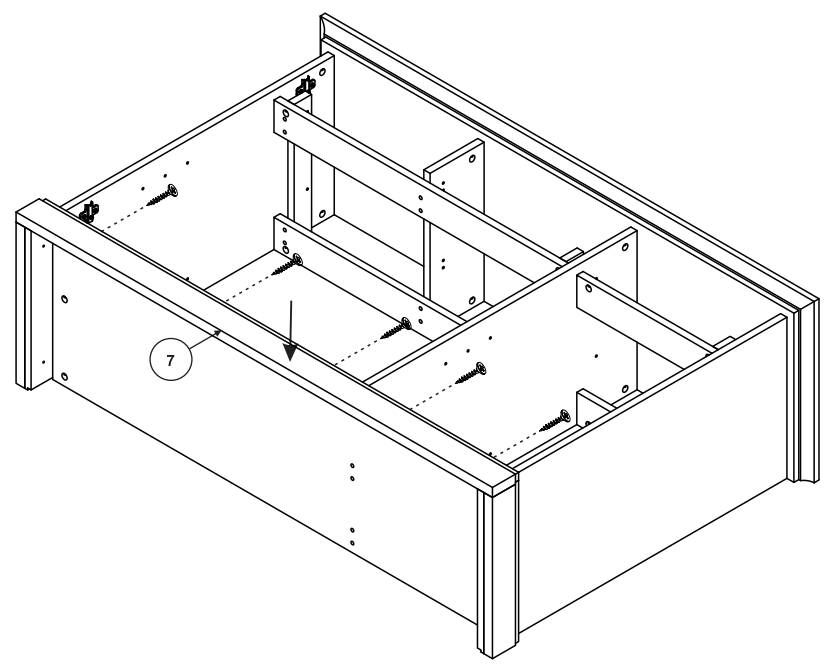



NB 3,5x35

 x5

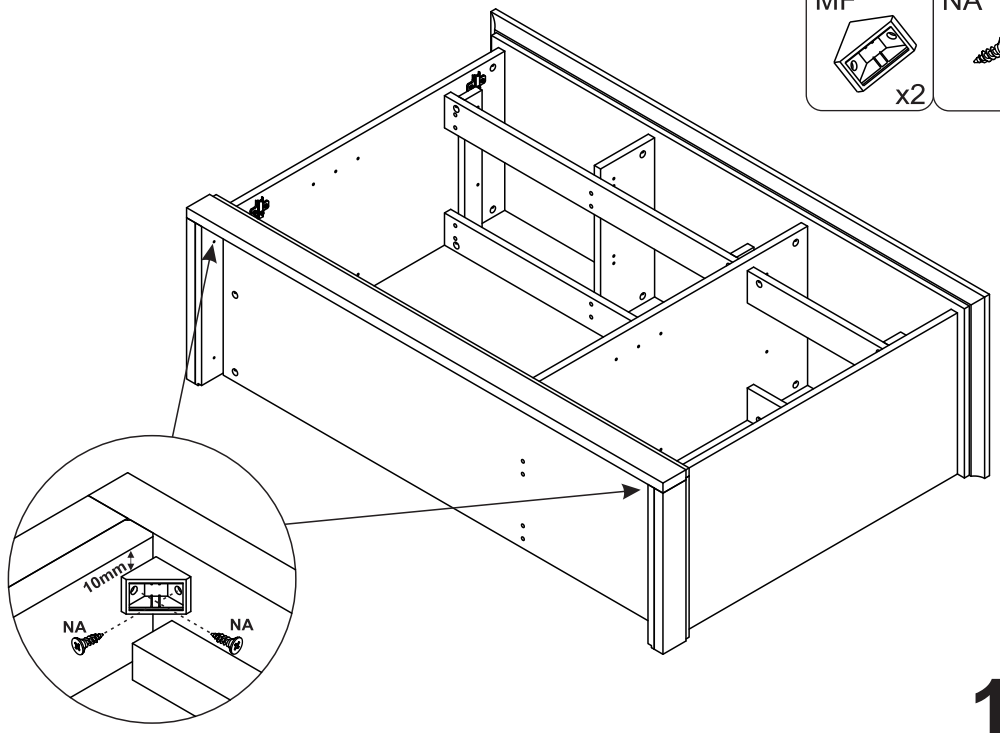
12





MF x2



NA 3,5x16

 x4





13

MA x6


S x1


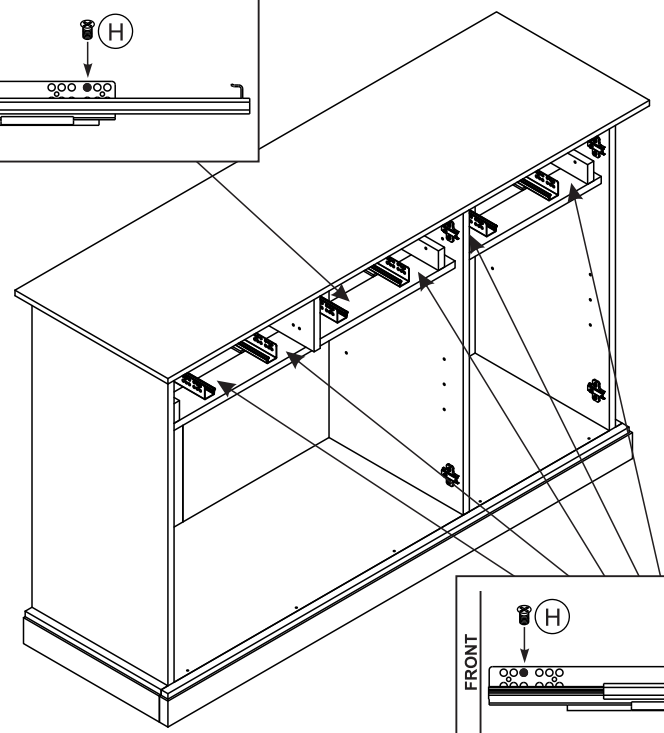
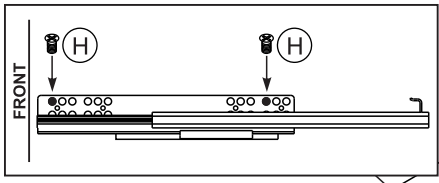
YB 1x20

 x45

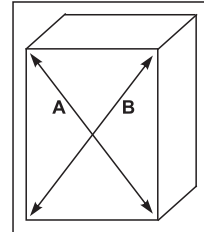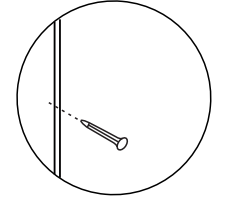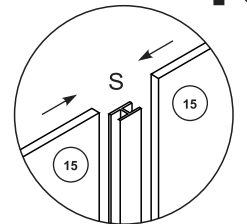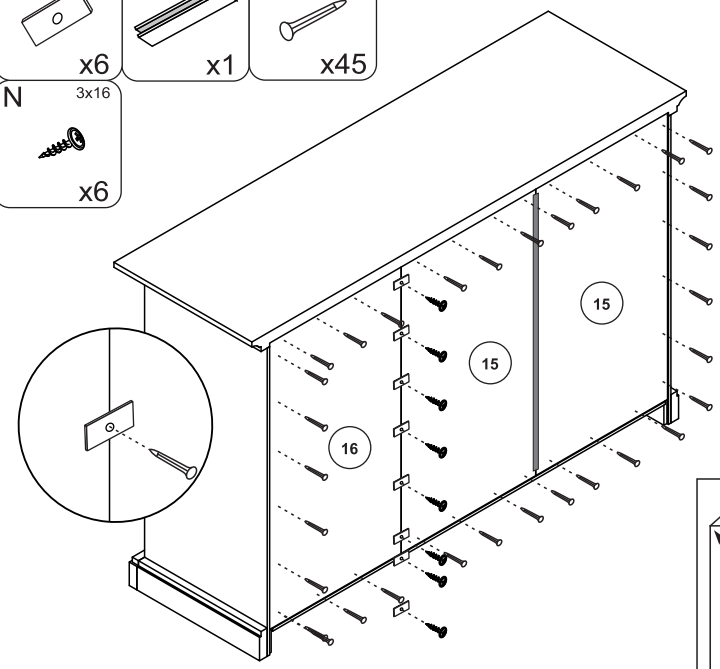
N 3x16

 x6




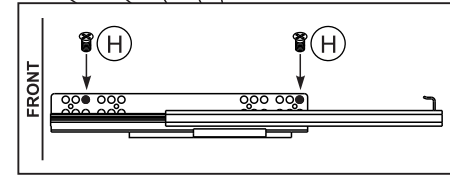
A=B



14





G L=350

 x3

H 6,3x11

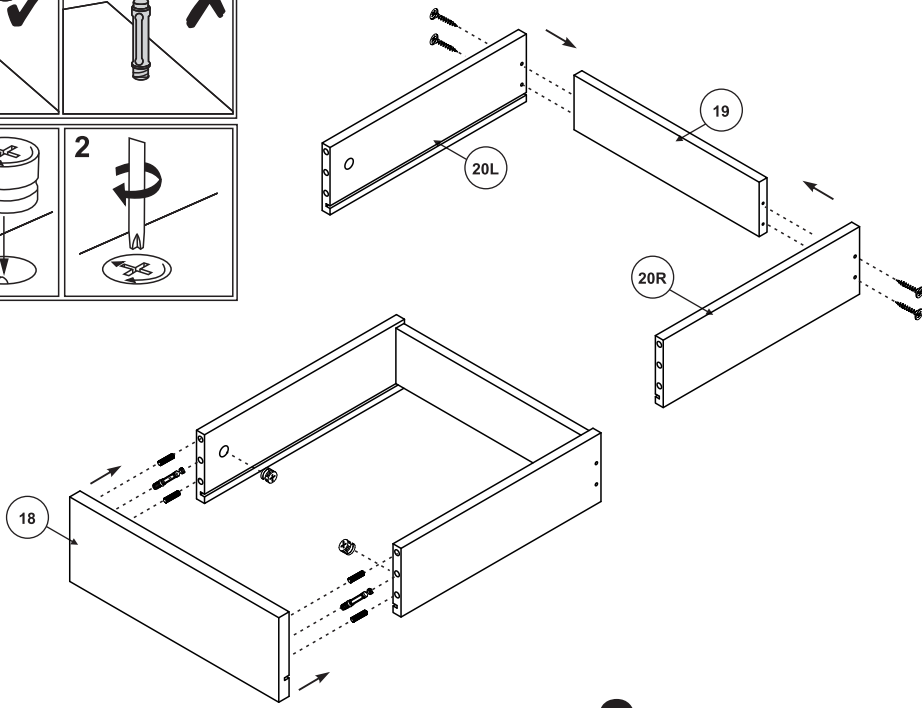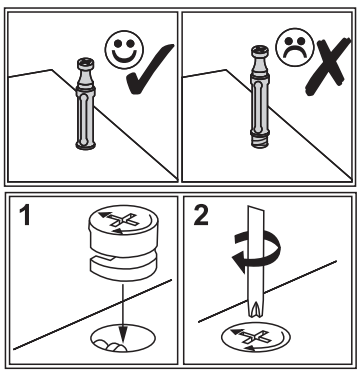 x12



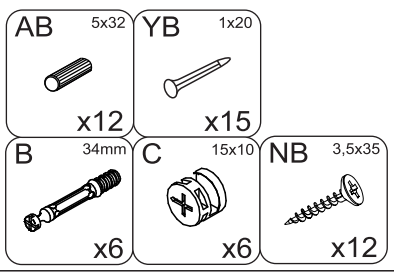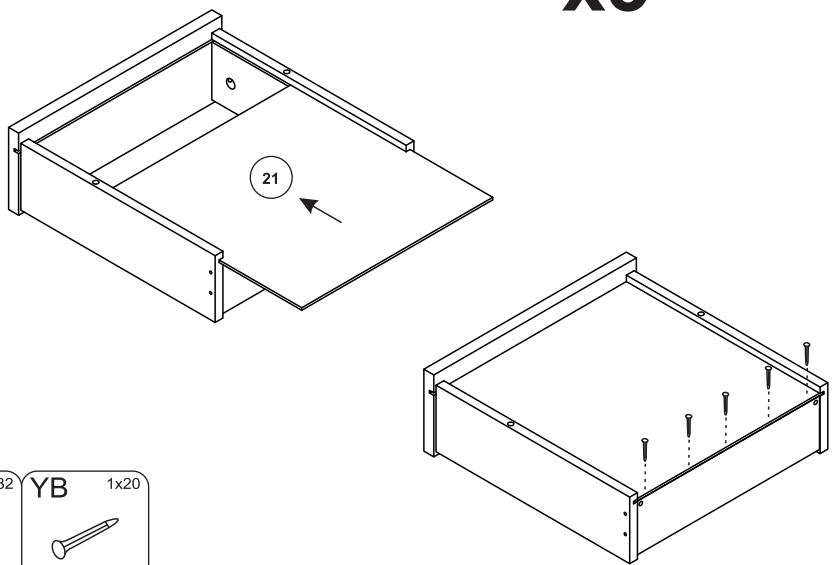


x3




15



16

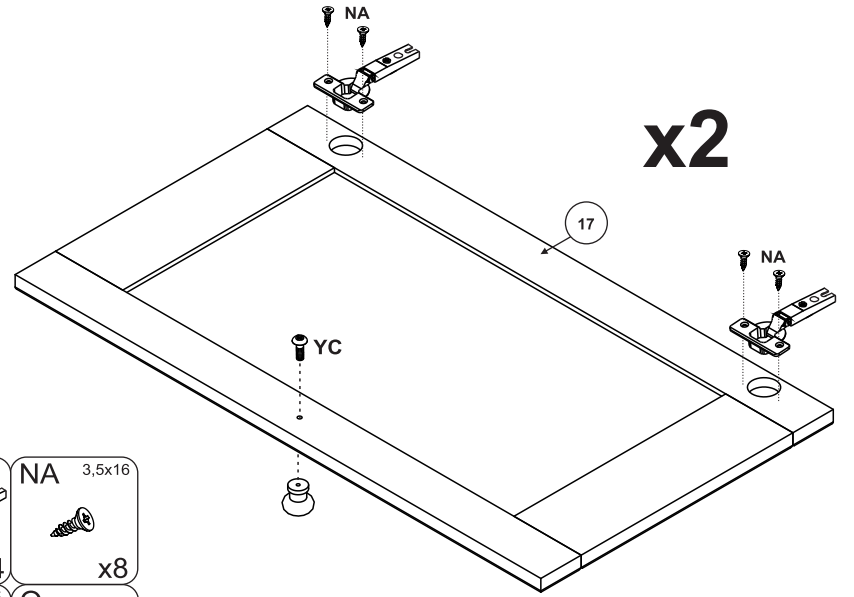

x2



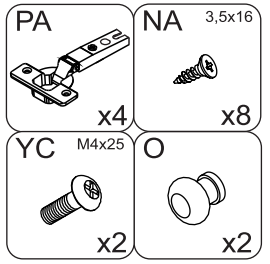


17

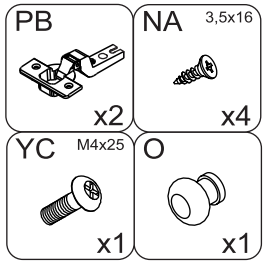
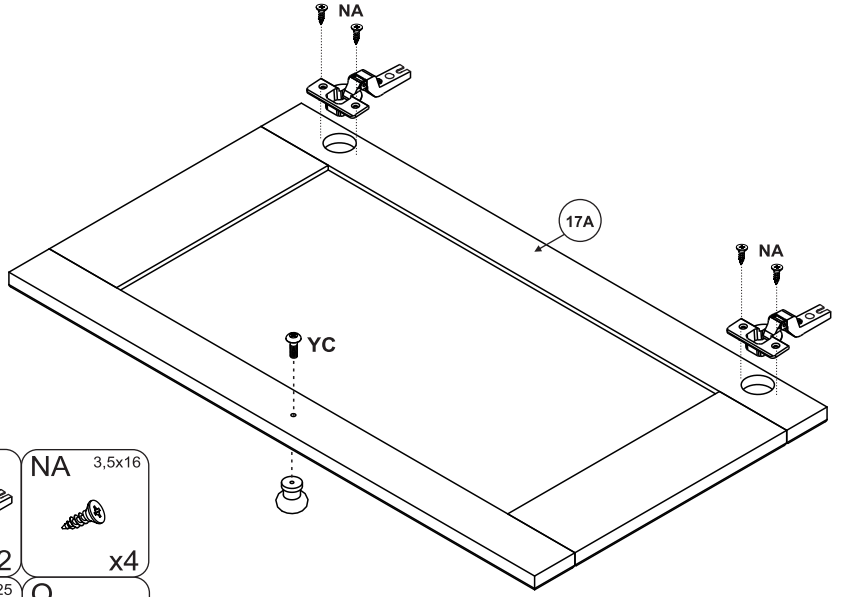


Y 5mm
x8






18

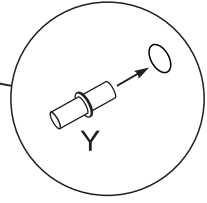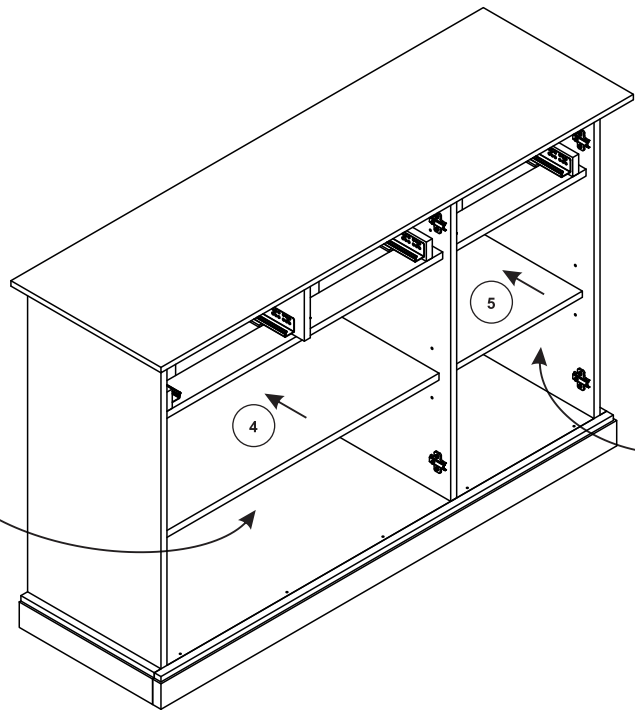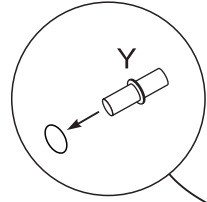

N 3x16
x6

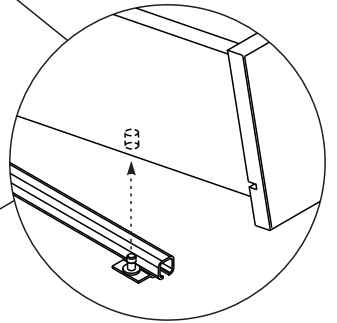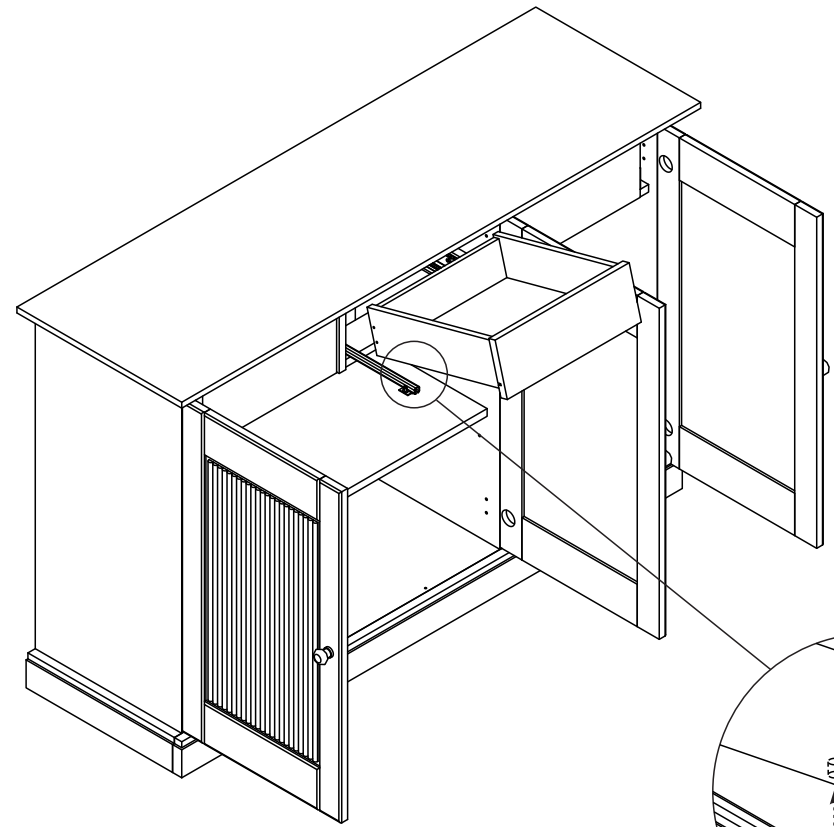

19

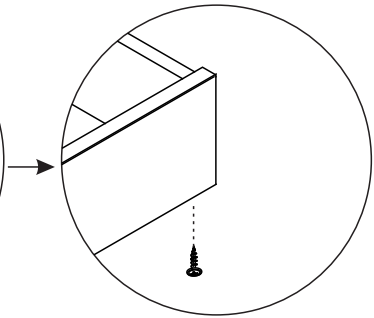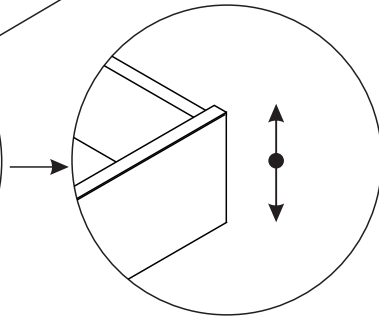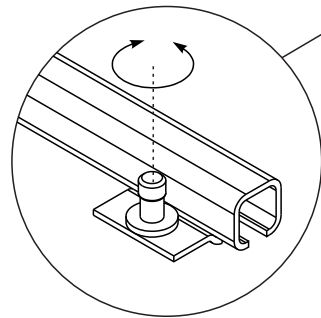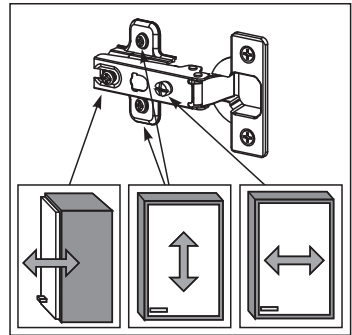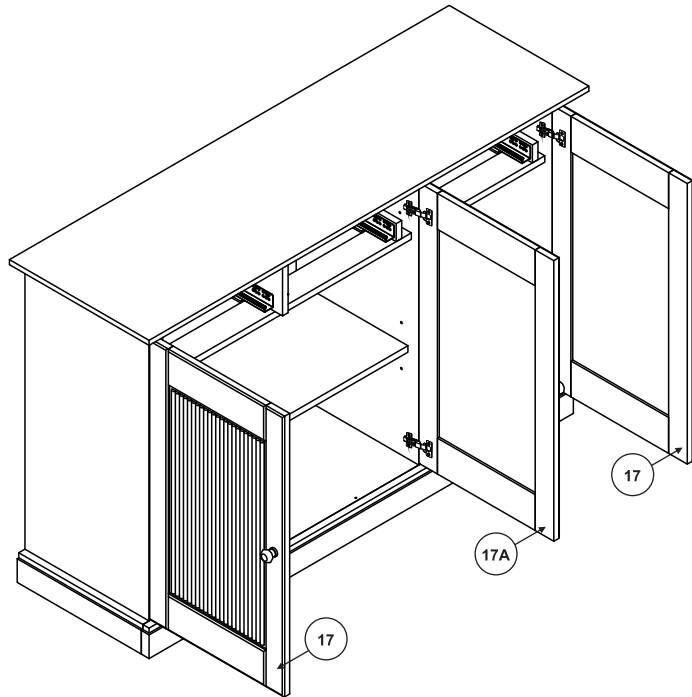

20